



## *fitting at a glance...*

- 1 Install hidden tray and plumbing. Take into account that the hidden tray must finish flush with the tanking board. It is important to prepare subfloor before hand to work out finished heights.
- 2 Carry out subfloor preparation and prime subfloor.
- 3 Install tanking board using flexible tile adhesive finishing flush with edge of tray.
- 4 Prime joints, overlapping edges by 75mm including 75mm up the wall.
- 5 Overlap all joints and edges with tanking sealing tape, including hidden tray and any pipes.
- 6 Apply sealing putty on all corners and around pipes coming through the floor. Using flexible tile adhesive, tile the whole floor are (minimum tile size, 25mm).
- 7 Grout tiles with flexible tile grout between floor and wall.
- 8 Silicone all edges between floor and wall with good quality silicone.

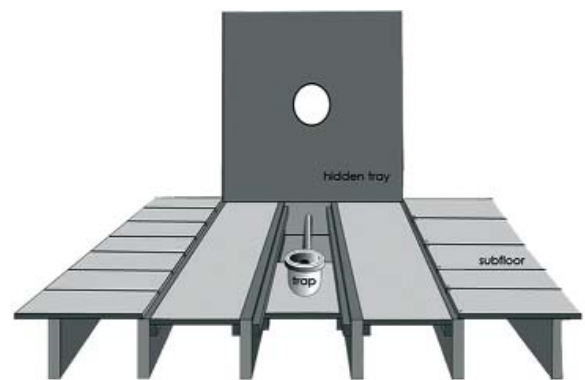

**step 1:** install hidden tray and plumbing

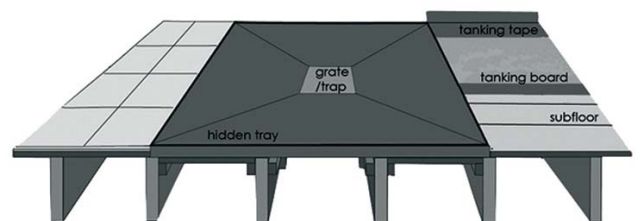

**step 6:** overlap joints with tanking tape

### tanking kits include...

- flush hidden shower tray with built in falls
- waste /trap with a quality stainless steel grate
- waterproof tanking boards
- 30 linear metres of tanking membrane tape
- 4 inner and 4 outer corner seals

1 bottle of waterproof  
jointing compound  
full fitting instructions